

SERVICE INSTRUCTIONS

Insert coins or tokens into the coin slot or your magnetic key into the magnetic lock, or use the READY2WASH app.

According to the selected programme, remove either the pressure washer gun 🚰 or the snow foam cannon 🌊 or the car wash brush with shampoo 🧼. Grab the pressure hose with both hands and maintain a distance of 30 cm between the jet and the bodywork.

ATTENTION: Prior to selecting programme 4 – Car wash brush, select programme 3 – General car wash 🚰 to first remove grime. Thoroughly rinse the brush in the bucket on the stand. Otherwise, you risk scratching your car paint.

Select your chosen programme on the touch display.

Stick to the sequence of each programme.

 

After you finish washing, return the washing device to the stand.

WARNING:

Do not endanger people or animals with the water jet. / Turn off your motor. / CAUTION slippery surface. / Use device at your own risk. / Running programmes cannot be stopped. / Washing motors and changing oil is strictly prohibited. / Be careful with lower-quality car paint – high pressure. / Do not use any chemicals that are not permitted. / Do not use your own sponge for washing the vehicle. / Maintain cleanliness at the washing station.

THANK YOU FOR UNDERSTANDING THE TEAM OF AS SUPERWASH

WWW.AS-SUPERWASH.CZ

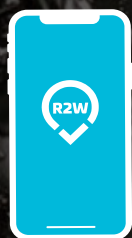

CLICK AND WASH

1. Open the app
2. Click on + to purchase tokens or scan the QR code of your voucher
3. Select a washing box and enjoy!

1. PRE - WASH (INSECTS + WHEELS)

Chemicals applied to remove insects and other grime – apply (spread) only on dirty spots and wheels. Use the washer gun with the straight hose. 🚰
Jet distance of 10-30 cm.

2. SNOW FOAM

When applied, the snow foam 🌊 covers the entire vehicle with a thick layer of foam that adheres to the surface thanks to its active substances, loosening dirt and grime. Jet distance of 20-80 cm.

3. GENERAL CAR WASH - DUAL

High-pressure wash using hot water and micro-powder with added shampoo. Use the washer gun with the straight hose. 🚰
Jet distance of 10-30 cm.

4. CAR WASH BRUSH WITH SHAMPOO

Car wash brush with shampoo. Use the car wash brush. 🧼

5. RINSE

Softened water for removing powder, foam, and remaining dirt. Use the washer gun with the straight hose. 🚰
Jet distance of 30 cm.

6. WAX

Hot water with wax to protect car paint. Use the washer gun with the straight hose. 🚰
Jet distance of 40 cm.

7. RINSE AND SHINE

Final rinse with demineralised water. Use the washer gun with the straight hose. 🚰
Jet distance of 30 cm.

8. EXTRA CHASSIS WASH OF A VEHICLE

High-pressure wash removing dirt and salt even in the hard-to-reach parts of the vehicle chassis.

We recommend finishing your wash with programme No. 7.

Wash your vehicle from top to bottom. Maintain a jet distance of approx. 30 cm from the vehicle.